

How to measure a leaf spring

All springs are measured from the end of the spring to the center of the center bolt, following along the arch of the spring.

